



**INSTALLATION
INSTRUCTIONS**

Accessory
FOG LIGHTS


Application
**2014 ACCORD LX
4-DOOR**

Publications No.
All 50721
Issue Date
AUG 2013


PARTS LIST

P/N 08V31-T2A-100C


Left fog light

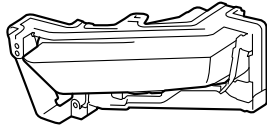

Right fog light

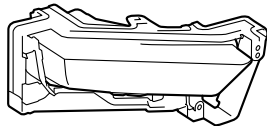


Left trim

 


Right trim




Fog light harness

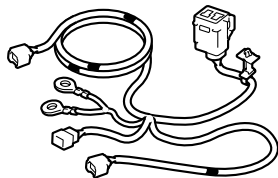


Relay bracket

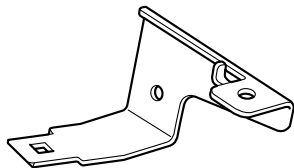


Light switch

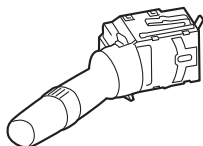

Relay

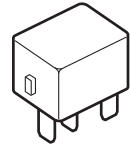


15A fuse

 


8 Self-tapping screws




5 Wire ties

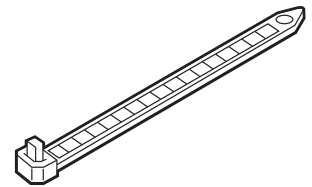


4 Aluminum tapes

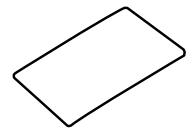

Washer-bolt

 

Cover

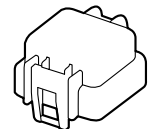


TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Ratchet
10 mm Socket
10 mm Open end wrench
Diagonal cutters
Isopropyl alcohol
Shop towel
Scissors
Masking tape
Blanket

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)


Illustration of the Fog Lights on the Vehicle

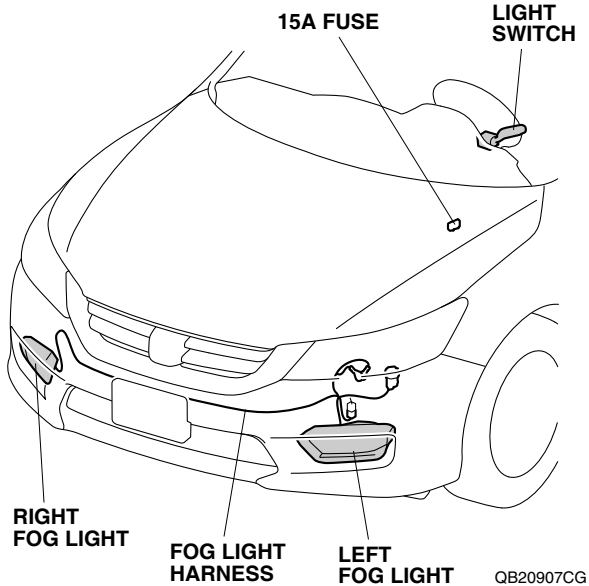


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.
2. Turn the steering wheel 90° clockwise. Using a plastic trim tool, release the retaining tab.

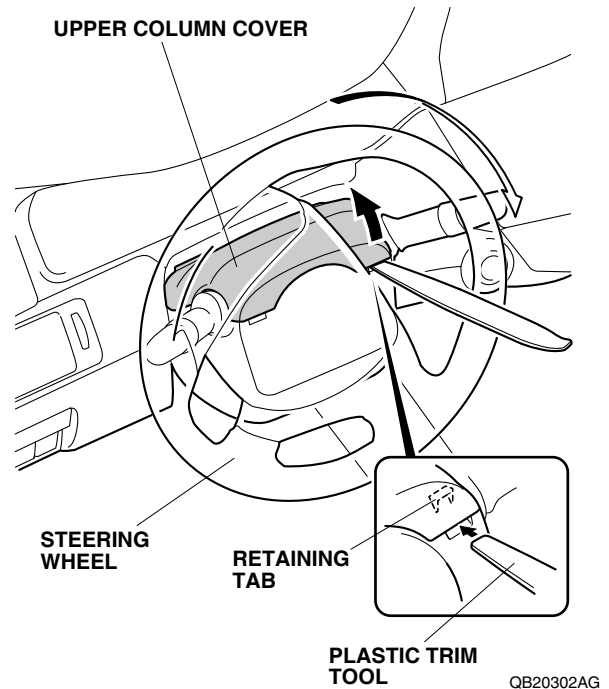


3. Turn the steering wheel 180° counterclockwise. Using a plastic trim tool, release the retaining tab.

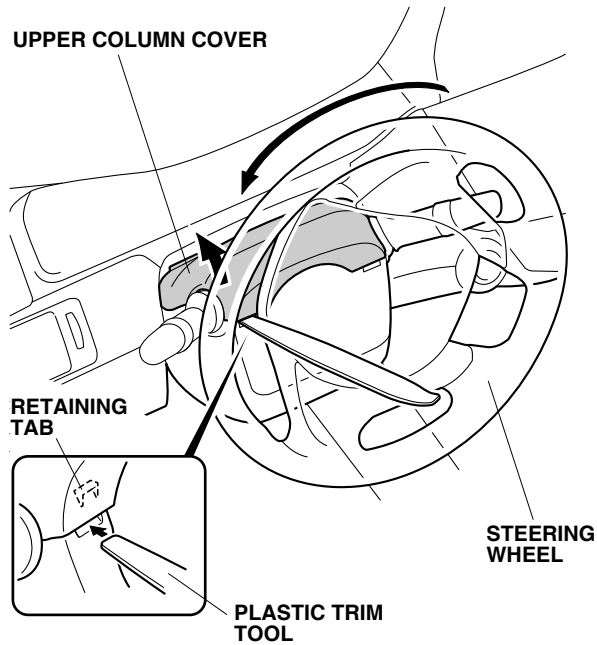


QB20303AG

4. Lower the tilt lever, and release the upper column cover (two retaining tabs and two hooks).

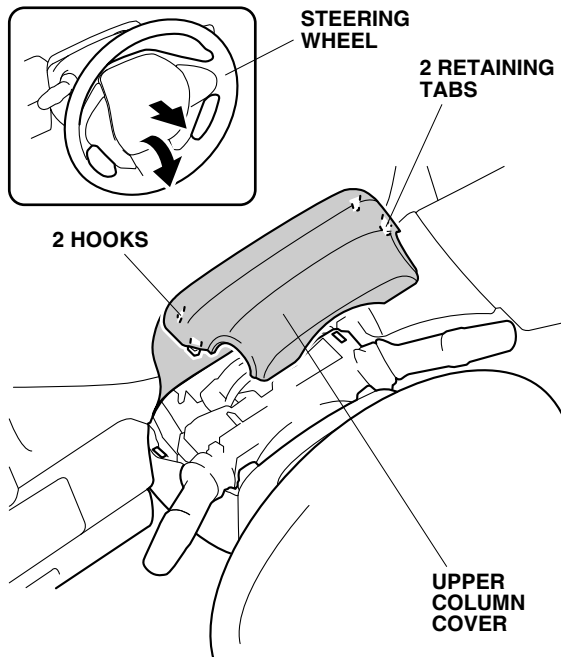


QB51801AG


5. Remove one self-tapping screw from the lower column cover.

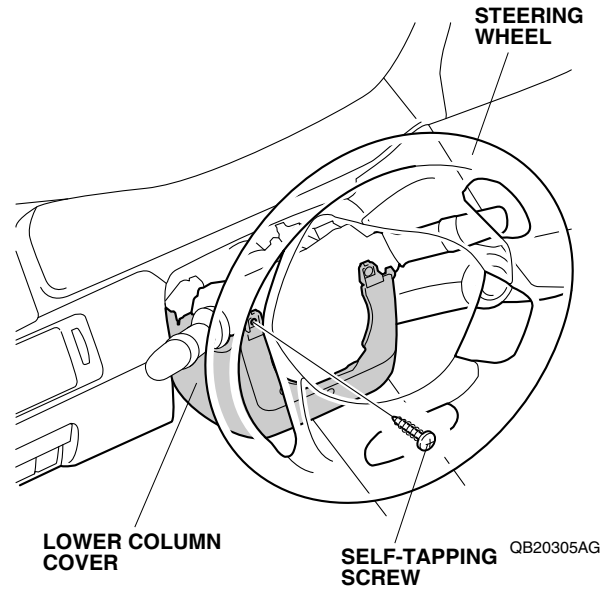


6. Turn the steering wheel 180° clockwise, and remove the other self-tapping screw from the lower column cover.

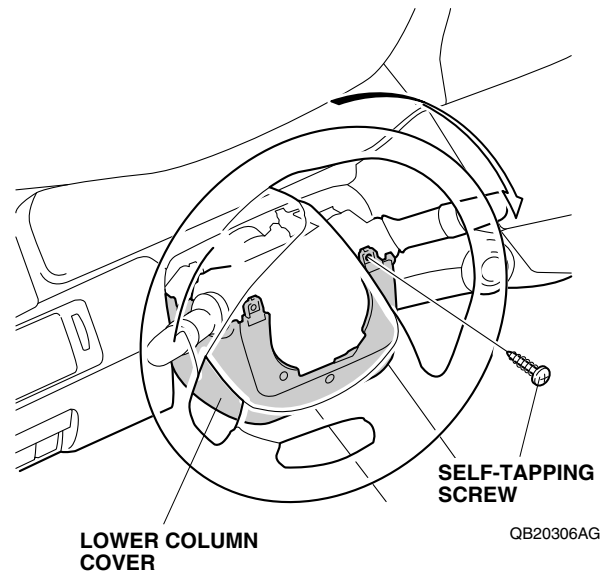

7. Remove the lower column cover (one self-tapping screw).

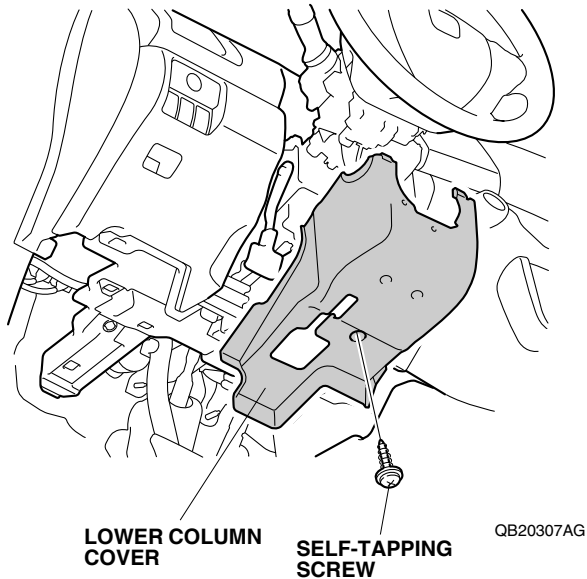


8. Unplug the vehicle connector from the light switch.

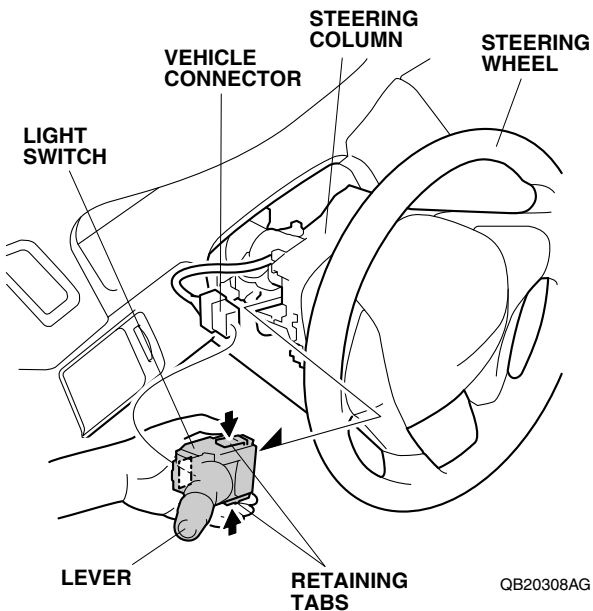


9. Push in on the two retaining tabs, slide the light switch out, and remove it from the steering column. Do not pull on the lever.


10. Install the new light switch to the steering column. Make sure both retaining tabs are locked in place. Do not push on the lever.

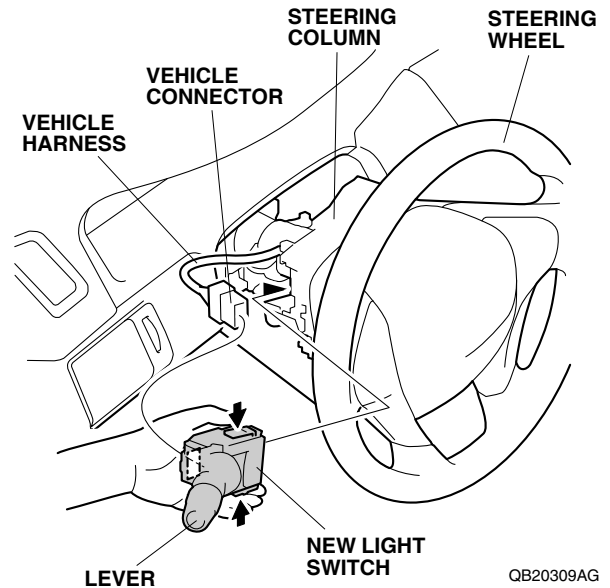

11. Plug the vehicle connector into the new light switch. Make sure the vehicle harness is not being stretched.
12. Attach masking tape to the front bumper, headlights and front fenders as shown.

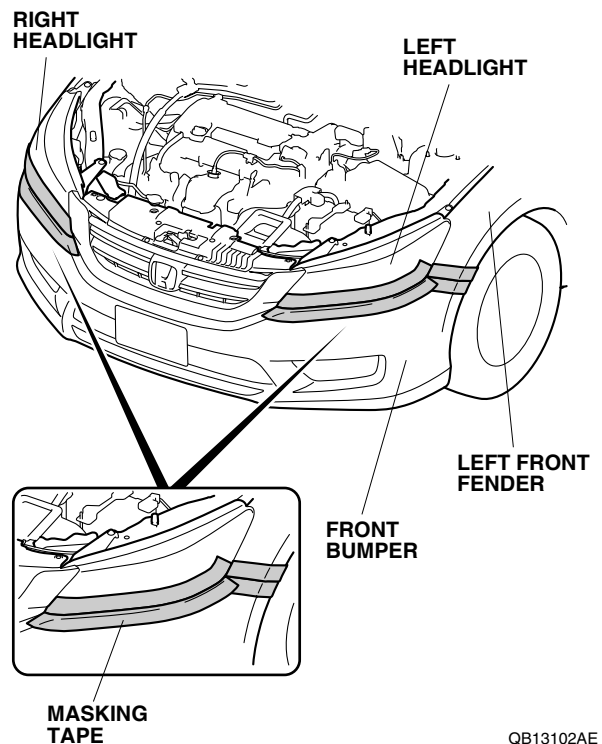


13. Remove the front grille cover (four clips).

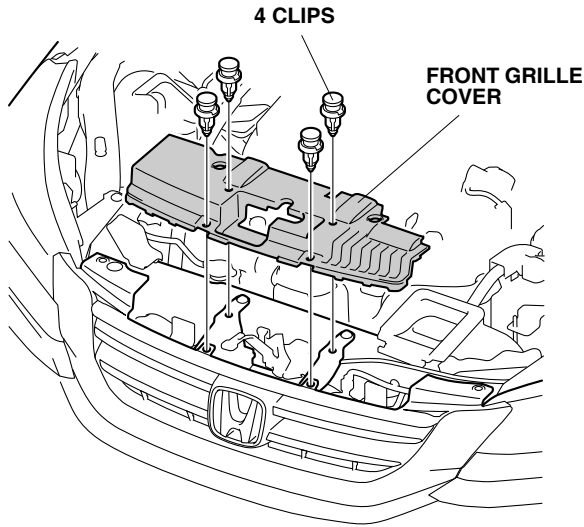


QB13103AE

14. Remove the front bumper.

- Remove the two self-tapping screws, ten clips, and two short clips.

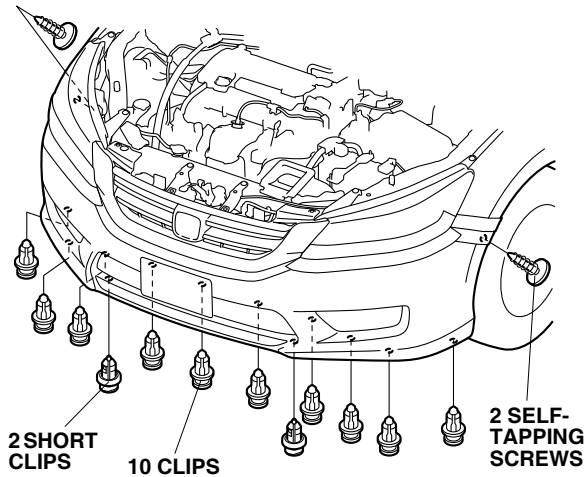


BOTTOM VIEW

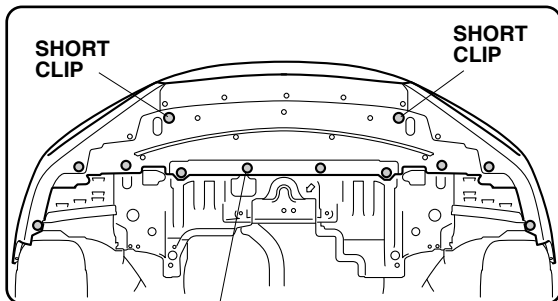


QB13104BE

- Release the four retaining tabs on each side.

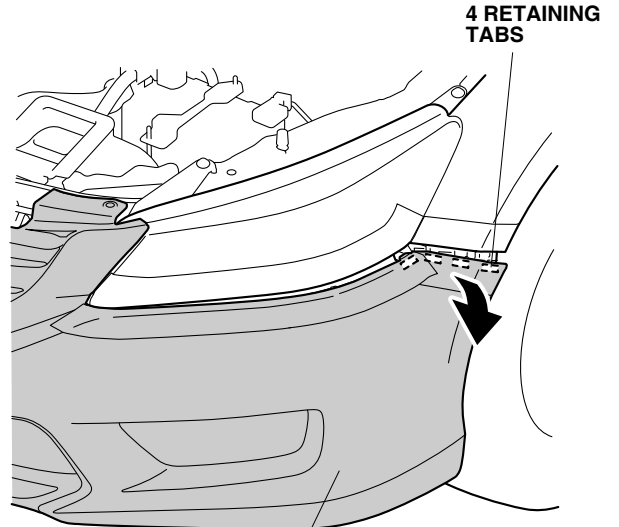

QB13105AE


- Release the four retaining tabs on each side.

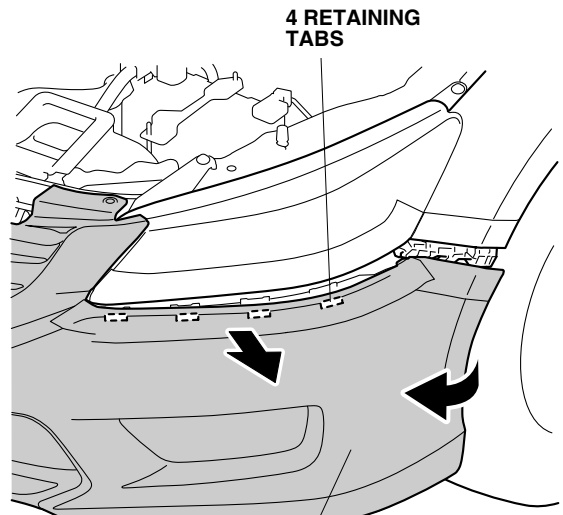


QB13106AE

- Remove the two clips.
- With the help of an assistant, remove the front bumper.


- Place the front bumper on a blanket.

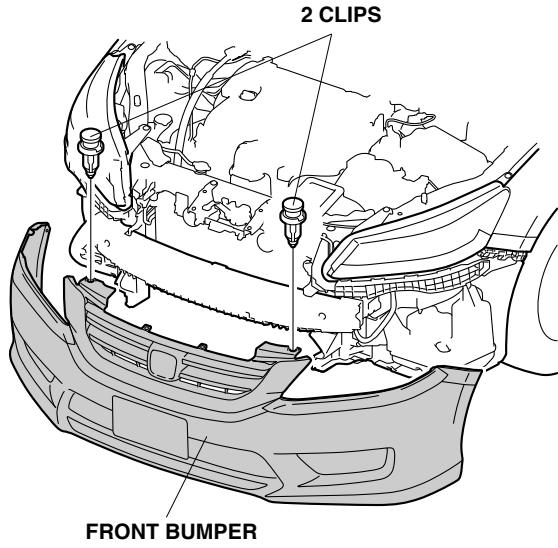


16. Install the left trim to the front bumper with seven retaining tabs.

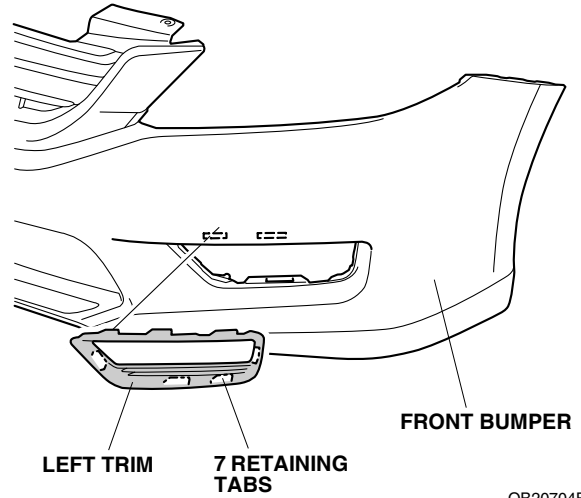

15. Remove the left cover from the front bumper (seven retaining tabs).

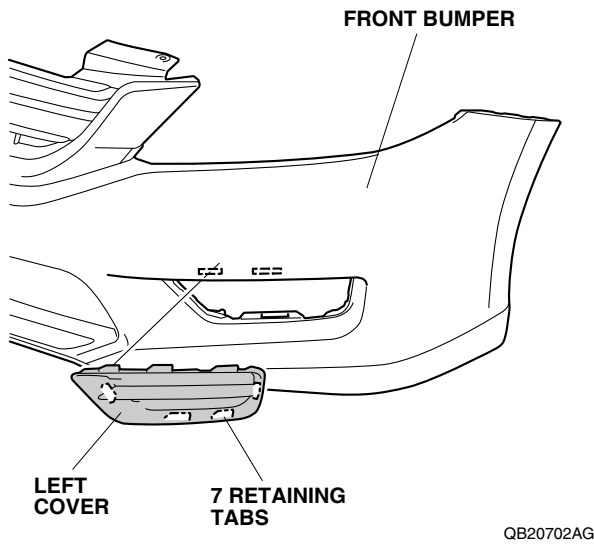


17. Install the left fog light to the front bumper with one tab and four self-tapping screws.

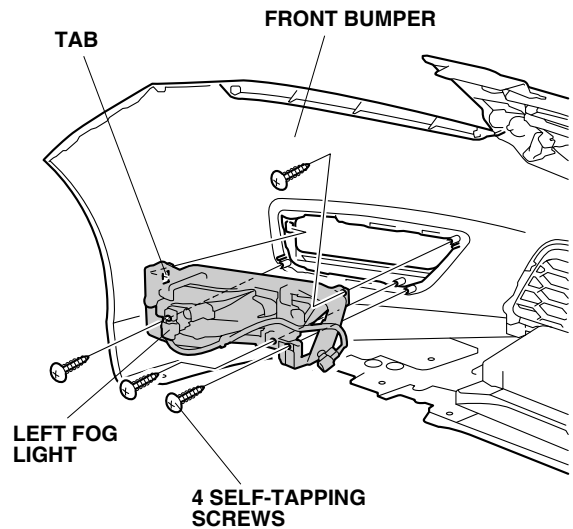


18. Repeat steps 15 through 17 to install the right fog light.

19. Plug the relay into the relay block on the fog light harness.

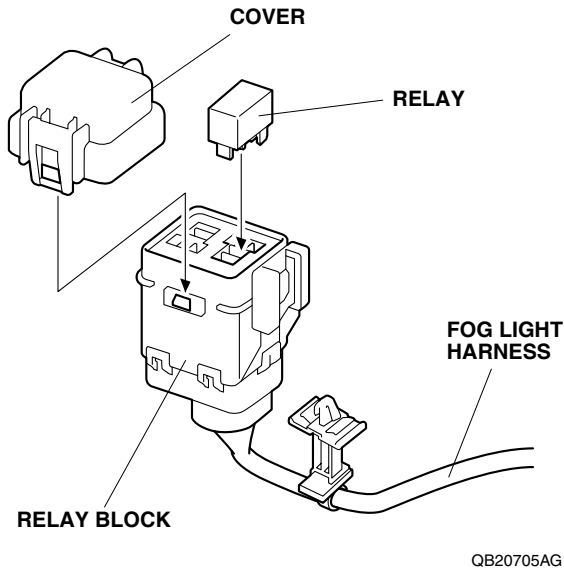


20. Install the cover onto the relay block.
21. Install the relay bracket to the relay block on the fog light harness. Make sure the relay bracket is installed in the correct position.

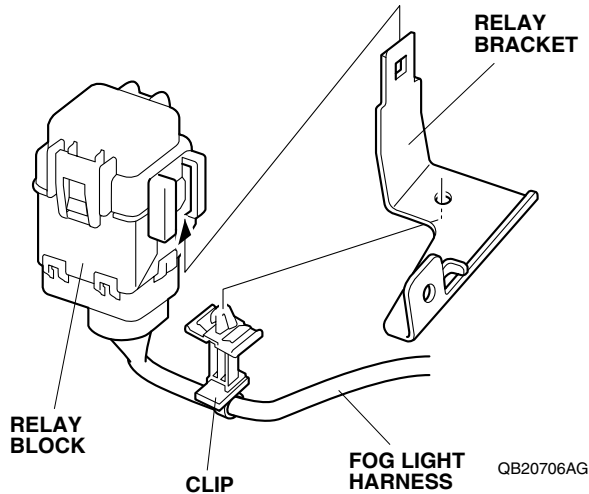


22. Secure the clip from the fog light harness to the relay bracket.

23. Install the relay bracket to the vehicle panel using the washer-bolt supplied.

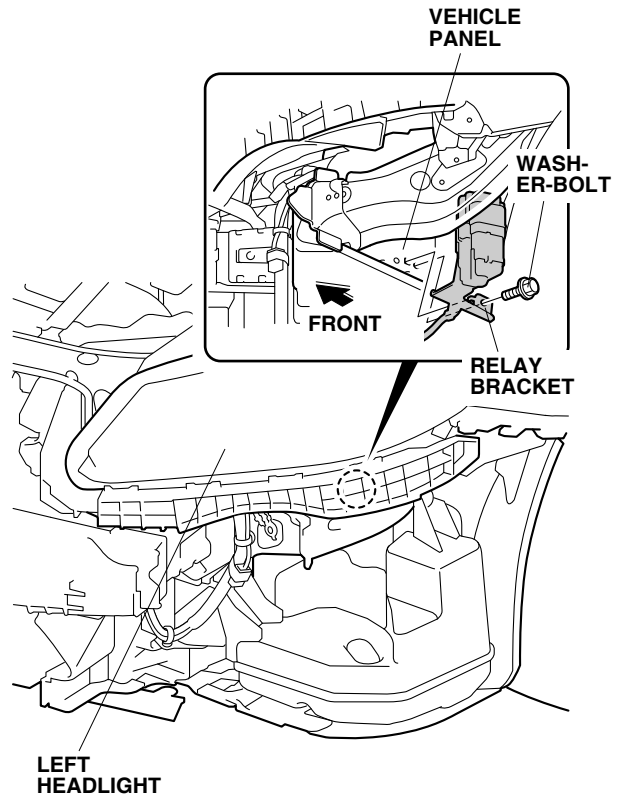


24. Route the fog light harness as shown. Remove the vehicle ground bolt, and secure the fog light harness ground terminals A and B to the vehicle ground terminal. Reinstall the vehicle ground bolt.

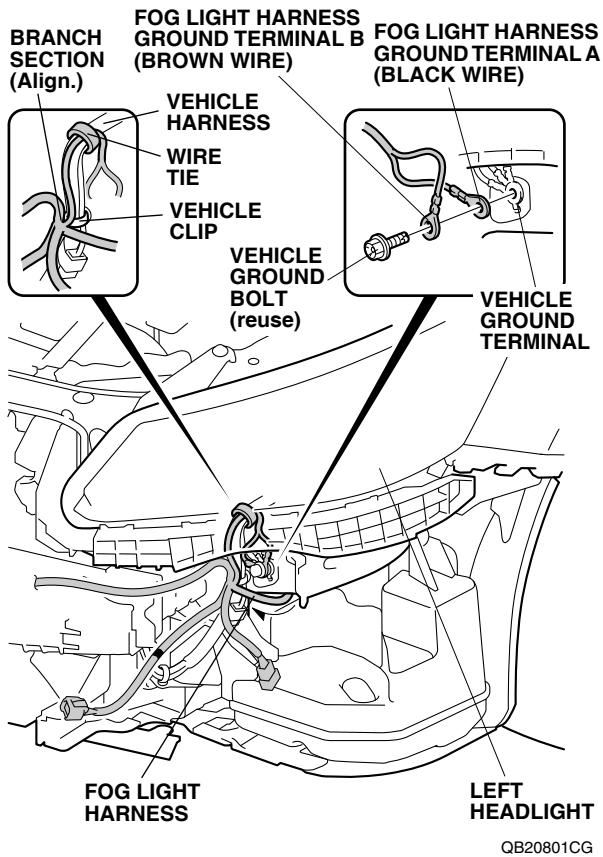


25. Secure the fog light harness to the vehicle harness with one wire tie at the location shown.

26. Locate the vehicle 2-pin connector taped to the vehicle harness. Remove the tape to free the vehicle 2-pin connector.

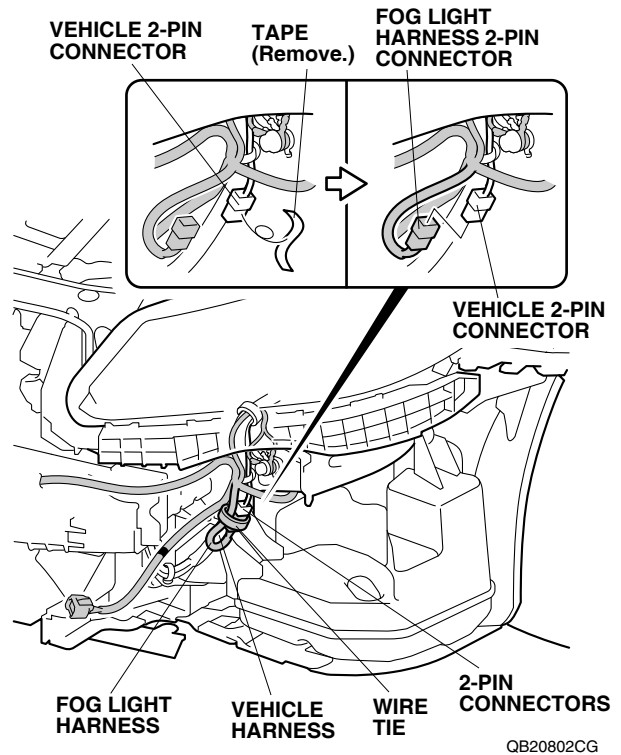


27. Plug the vehicle 2-pin connector into the fog light harness 2-pin connector, and secure the 2-pin connectors and the fog light harness to the vehicle harness with one wire tie.


28. Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

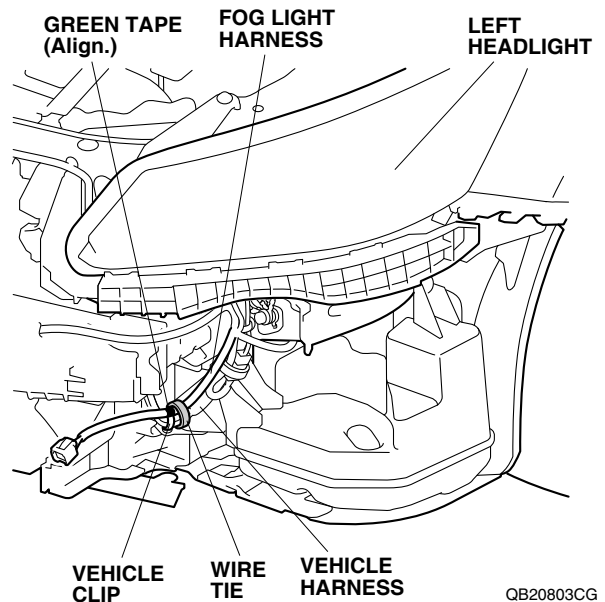


29. Route the fog light harness along the bumper beam.

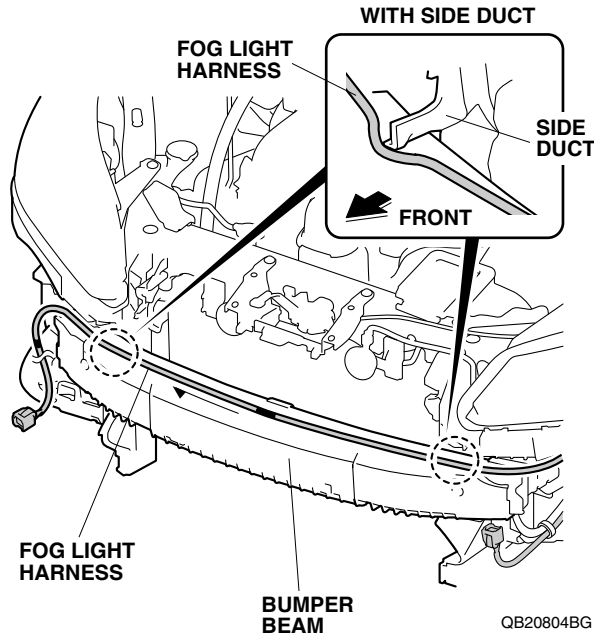


30. Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

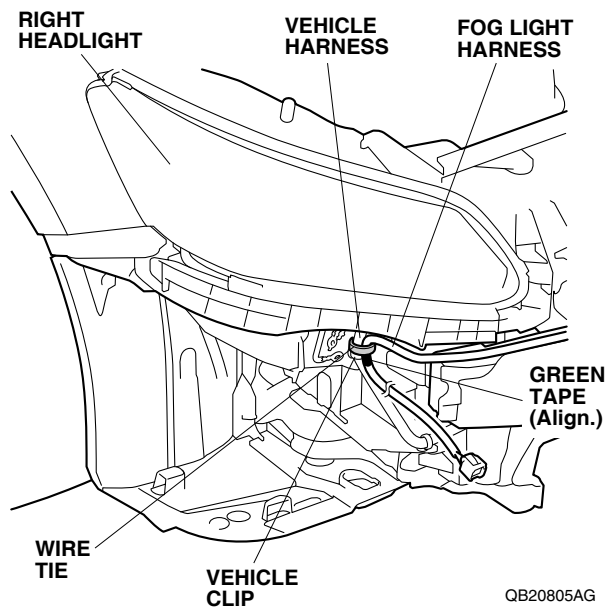


31. Using isopropyl alcohol on a shop towel, thoroughly clean the bumper beam where the aluminum tapes will attach.

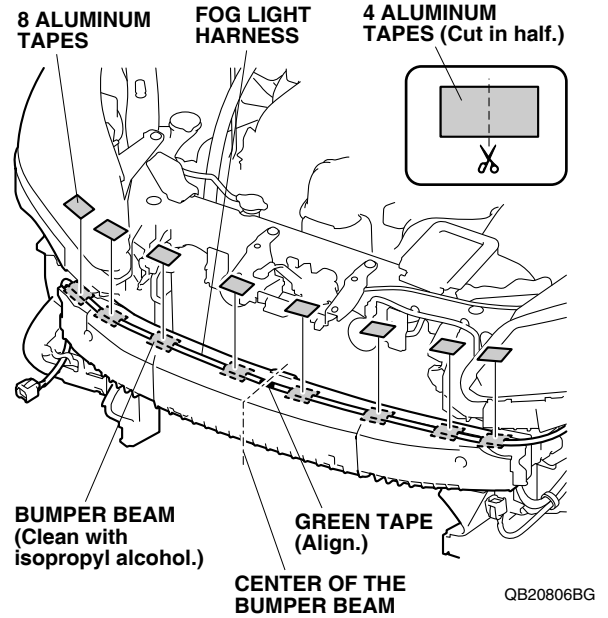


32. Using a scissors, cut four aluminum tapes in half.
 33. Align the green tape on the fog light harness with the center of the bumper beam, and secure the fog light harness to the bumper beam with eight pieces of aluminum tape.
 34. Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

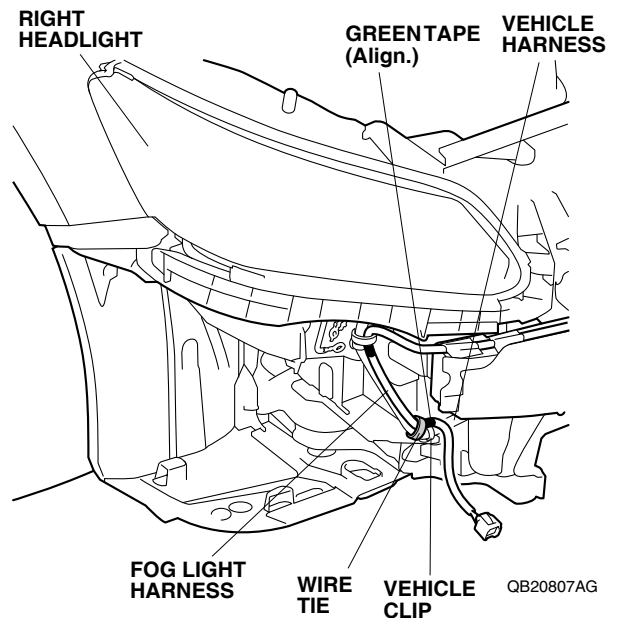


35. With the help of an assistant, bring the front bumper close to the vehicle. Plug the two fog light harness 2-pin connectors into the left fog light subcord 2-pin connector and right fog light, and reinstall the front bumper.

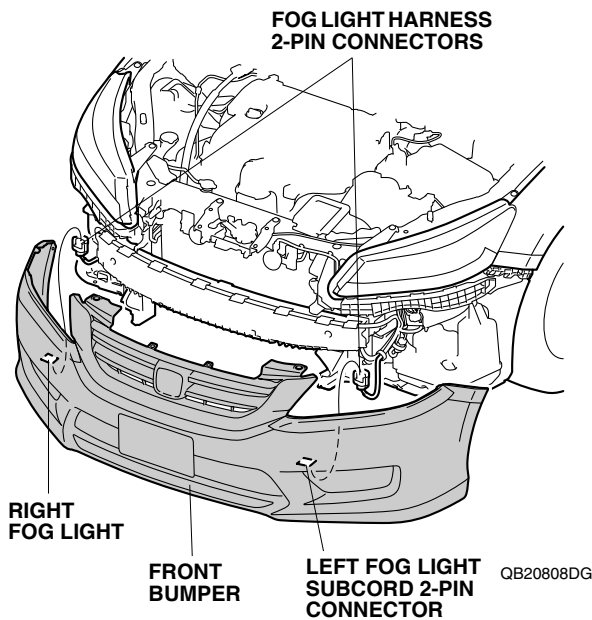

36. Under the hood, remove the underhood fuse relay box cover (three retaining tabs).

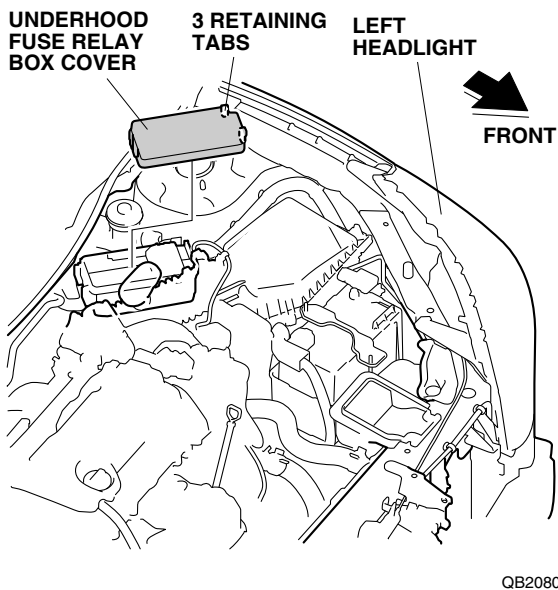

37. Plug the 15A fuse into the underhood fuse relay box.

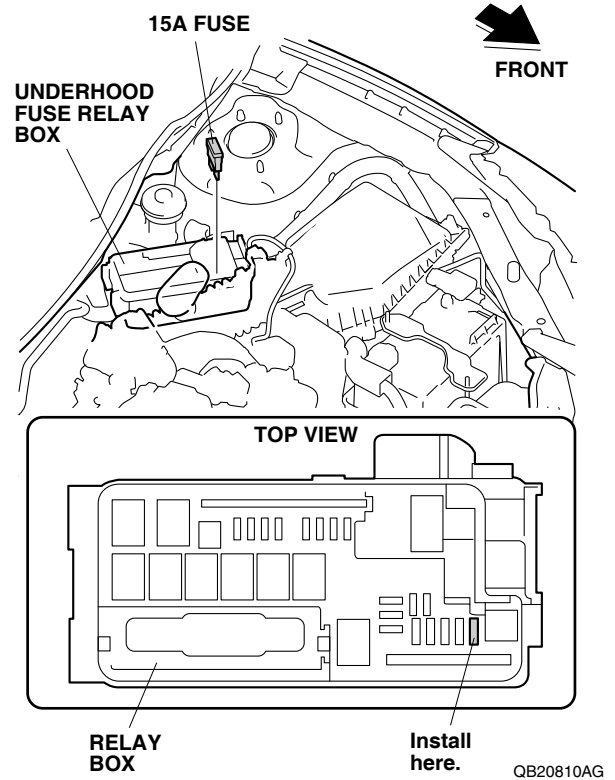


38. Check that all wire harnesses are routed properly and all connectors are plugged in.
39. Reinstall all removed parts.
40. Reconnect the negative cable to the battery.
41. Press and hold the radio power button for two seconds to restore the radio and navi (if equipped) system functions.
42. Reset the clock on vehicle without navigation.

USE AND CARE

How to Operate the Fog Lights

- Turn the headlight switch to the AUTO or “**D**” position (headlights on low beam).
- Turn on the fog light switch (indicator is on).
- If the fog lights do not turn on, check the fuse and all the connectors, including the ground cable.

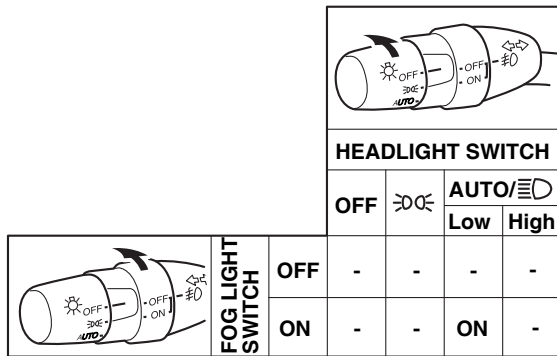


922602AG

NOTE: The fog light lenses may cloud when the outside temperature is cold; this is normal and should go away in warm weather.


How to Aim the Fog Lights

- To adjust, turn the aim adjustment screw in or out until the correct aim is obtained.
- Adjust the aim according to local laws and regulations.

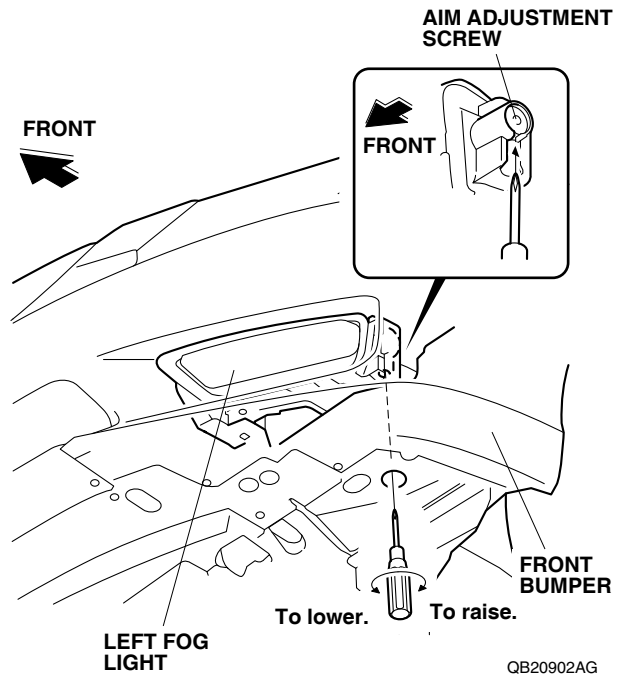


BULB REPLACEMENT

1. Loosen the washer-screw.

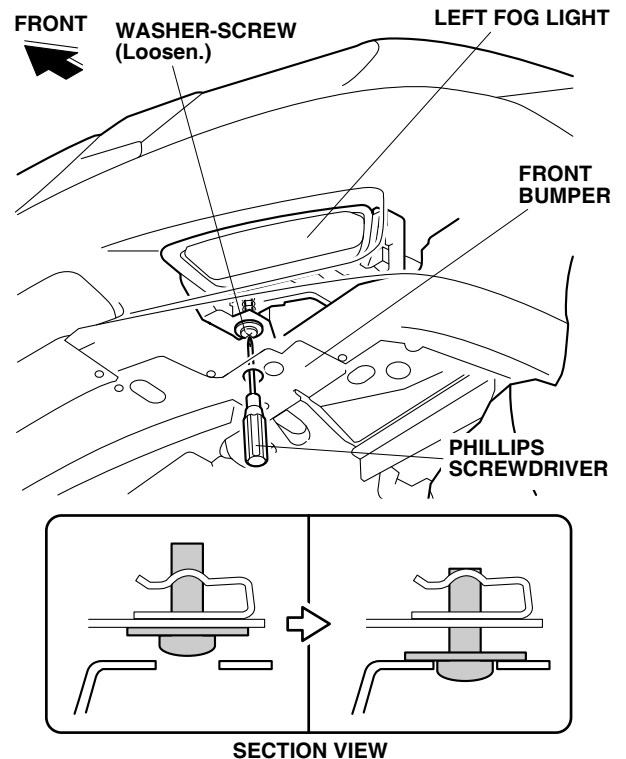


2. Remove the trim (seven retaining tabs).

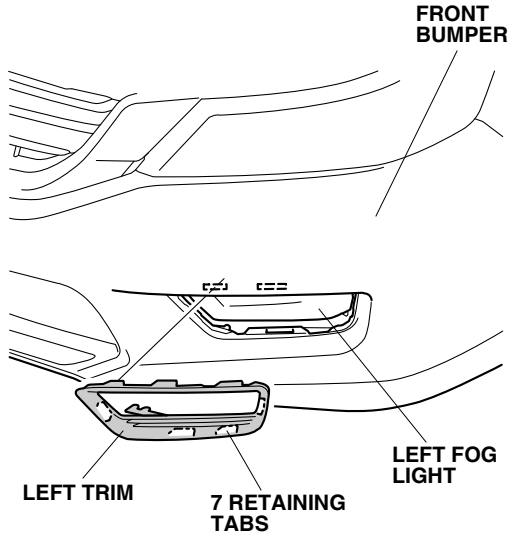


QB22306BG

4. Remove the bulb from the fog light as shown.

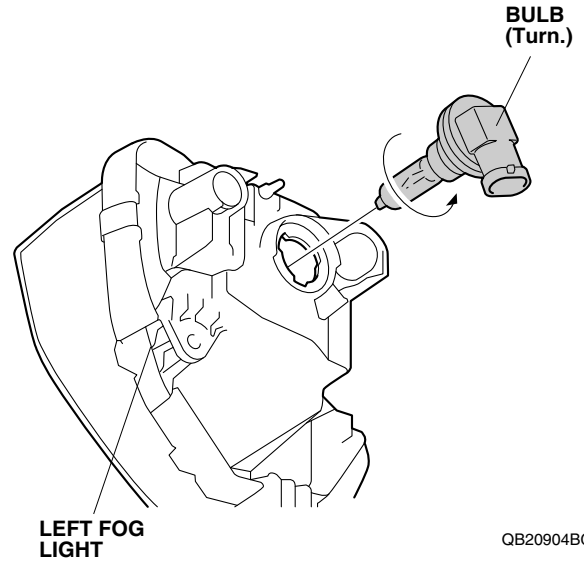

QB20904BG

3. Remove the fog light (two self-tapping screws, two retaining tabs and unplug the vehicle connector).


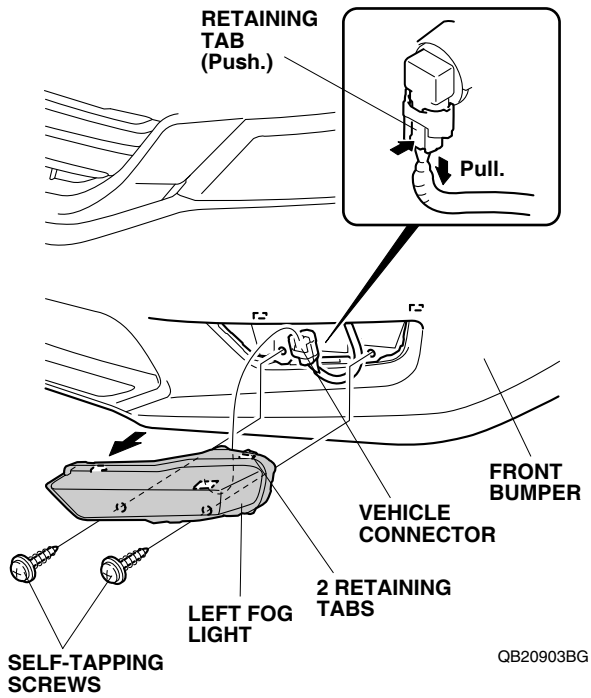


QB20903BG

5. Install the new bulb to the fog light.
- Use only a Genuine Honda halogen light bulb of specified wattage.

Rating: 12V 35W H8 Halogen Light Bulb
P/N 33165-TL0-003


- Do not touch the bulb. Oily or greasy substances on the bulb can shorten its service life due to the heat produced when the bulb is turned on. If the bulb is accidentally touched, wipe it clean with a soft cloth that has been dampened with denatured alcohol or a mild detergent solution.
- When installing the new bulb, align the cutout on the fog light with the tab on the new bulb and turn the new bulb clockwise until it locks. If the bulb is not properly align the fog light may annoy oncoming drivers.

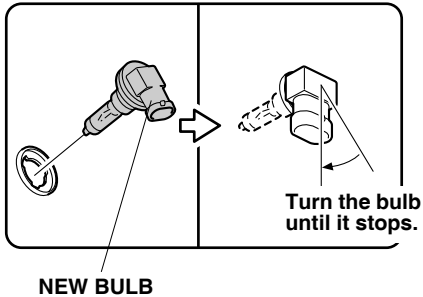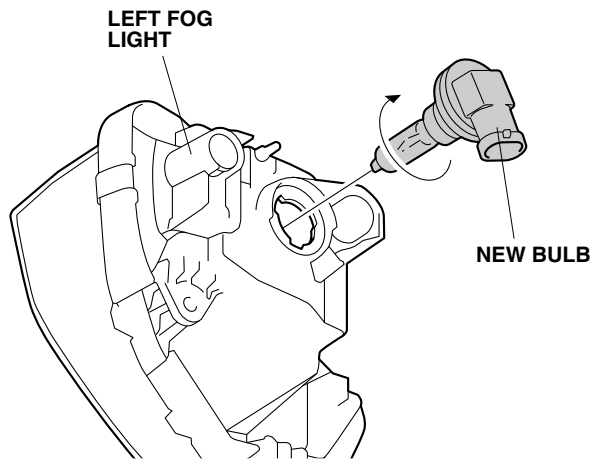

QB20905BG

6. Reinstall the fog light assembly.

- Check that the wire harness is not pinched.
- Be sure to tighten the self-tapping screws securely.
- Reinstall the trim.

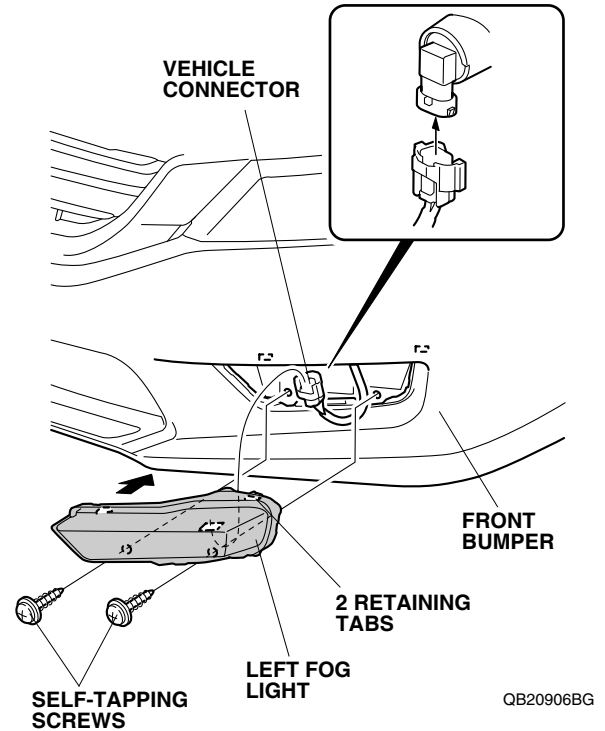

7. Check the operation of the fog light; re-adjust the aim if necessary.