
JAZZ

Parts List

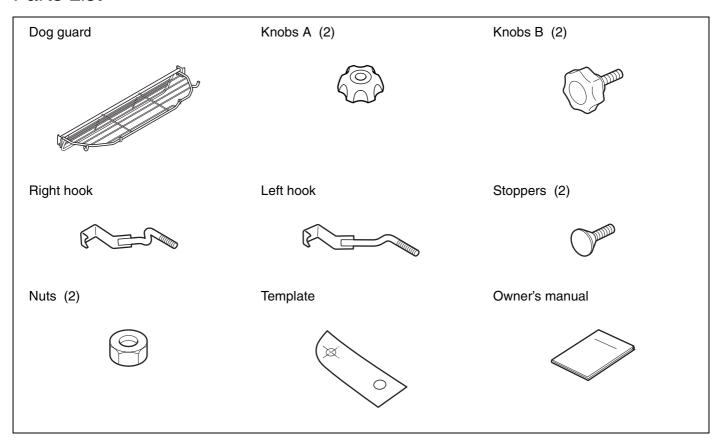

Tools and Supplies Required

• Drill

• Center-punch

• 3 mm, 9 mm Drill bits

• File

- Wrench
- Eye protection (safety goggles, face shield, etc.)


Masking tape

Before You Begin

Customer Information


• Install the accessory with care not to damage the vehicle body and the parts of the vehicle.

Illustration of the Components on the Vehicle

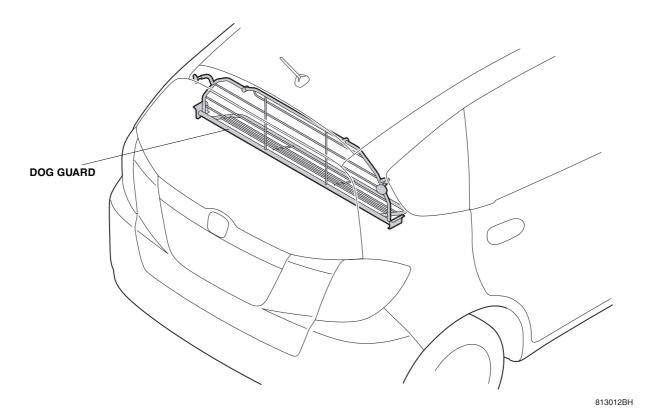


Installation


- 1. Attach the template to the right rear shelf base.
- 2. Use a center-punch to mark according to the template.

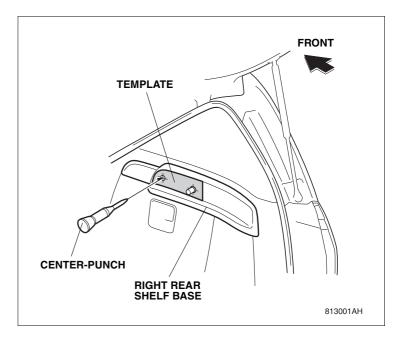


- 3. Wrap the masking tape around the drill tip to prevent too deep penetration.
- Remove the template. Wearing an eye protection, drill the marked position of the right rear shelf base using a 3 mm bit first, then with a 9 mm bit.

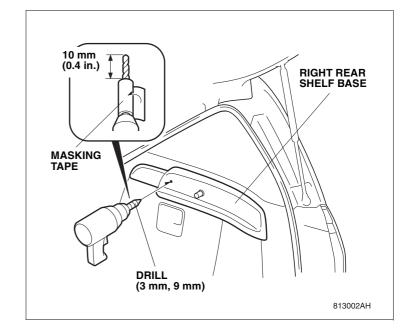


- 5. Reverse the template and attach it to the left rear shelf base.
- 6. Use a center-punch to mark according to the template.

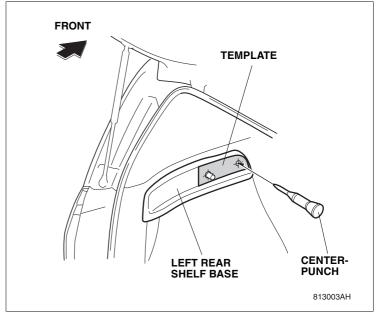


- 7. Wrap the masking tape around the drill tip to prevent too deep penetration.
- 8. Remove the template. Wearing an eye protection, drill the marked position of the left rear shelf base through the left rear shelf base and the left rear side lining using a 3 mm bit first, then with a 9 mm bit.

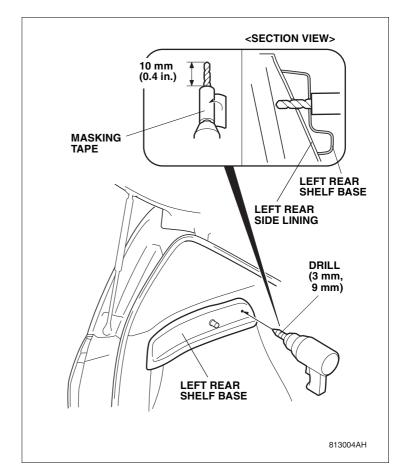


9. Open the two anchor covers.

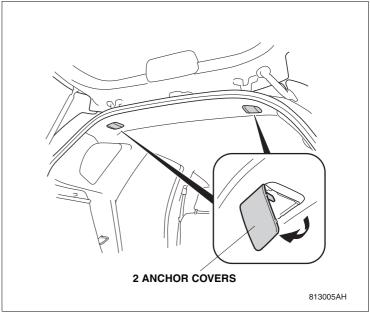


10. Install two nuts and two stoppers to the dog guard.

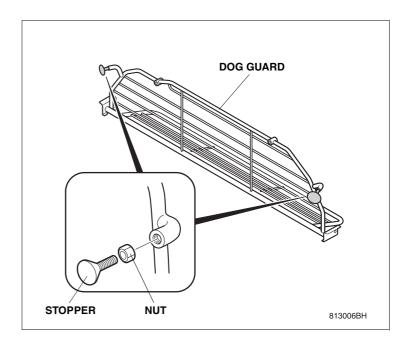


- 11. Place the dog guard on the shelf base.
 - Be careful not to damage the vehicle.

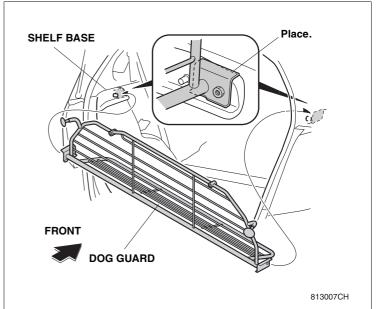


- 12. Engage left and right hook with the anchors and secure them to the dog guard.
 - Check the distinguishing mark on either side of the hook (right/left).

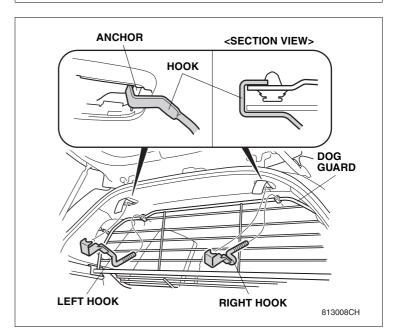

- 13. Secure the dog guard with knob B to the left rear shelf base.
 - To prevent damaging the left rear shelf base, fix knob B in accordance with the attachment hole of the left rear shelf base.
 - Be careful not to damage the left rear shelf base.
- Perform the same work also on the opposite side.

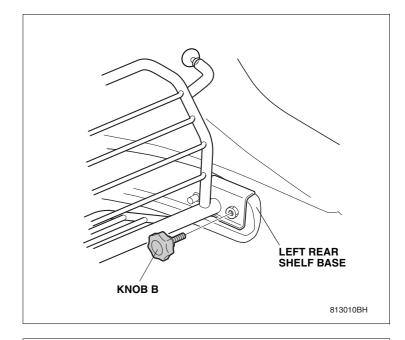

- 15. Secure left hook with knob A.
- 16. Close the anchor cover.
- 17. Perform the same work also on the opposite side.

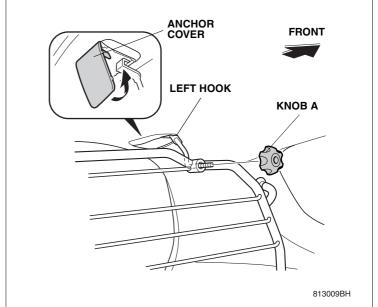

- 18. Place the stopper against the rear side garnish and secure it with the nut.
- 19. Perform the same work also on the opposite side.
 - Confirm that all parts have been tightened securely.

