



TOYOTA

ALWAYS A
BETTER WAY

Avensis Wagon

Wind Deflector

Installation Instructions

Model year: 2008/11, 2011/11, 2015/05



Vehicle code: **T27**-AW***W

Part number: PZ451-T5533-ZA

Manual reference number: AIM 001 239-1

Revision record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps
1	11-12-14	all	all	X	X	

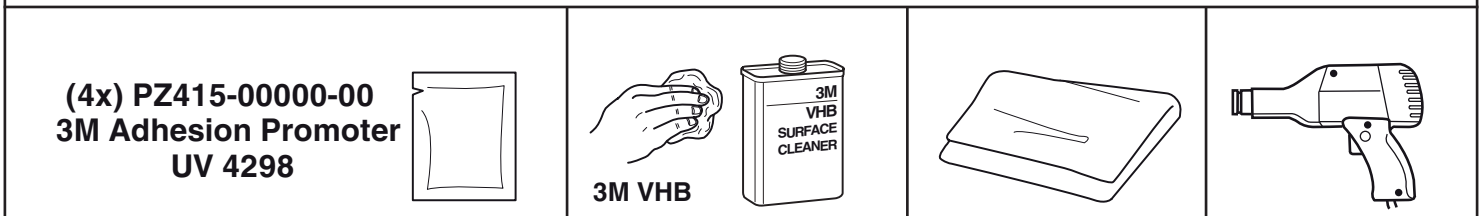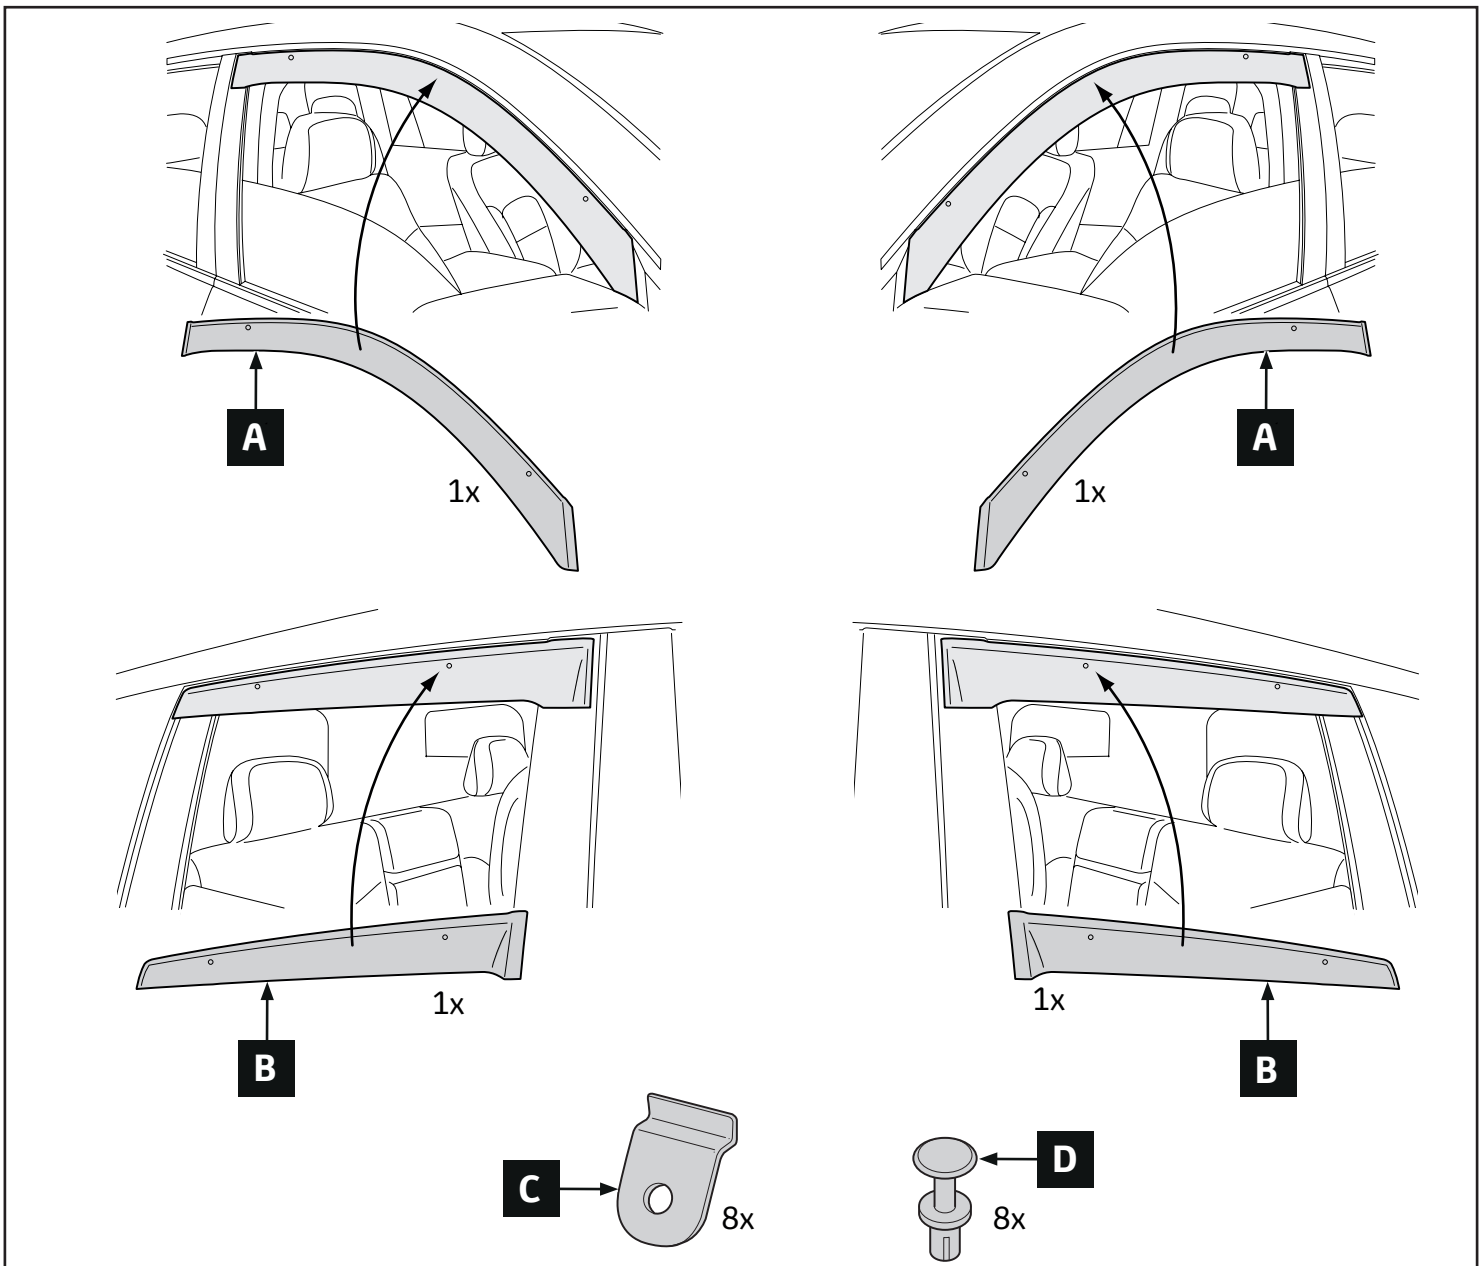



40°C

18°C



2




3



DRY


4







(4x) PZ415-00000-00
3M Adhesion Promoter
UV 4298




MIN 90 sec.
MAX 60 min.

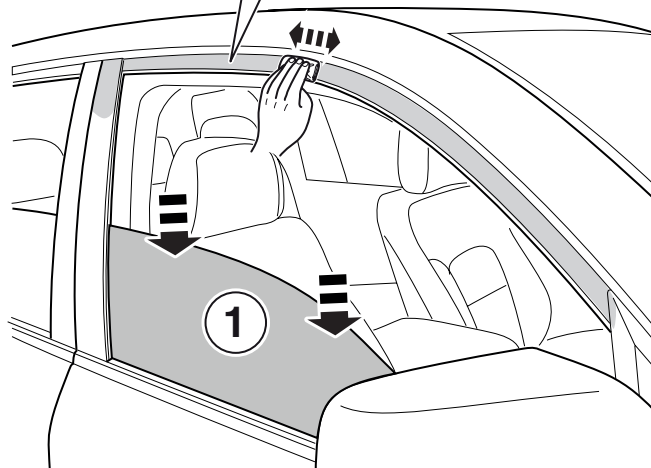


1

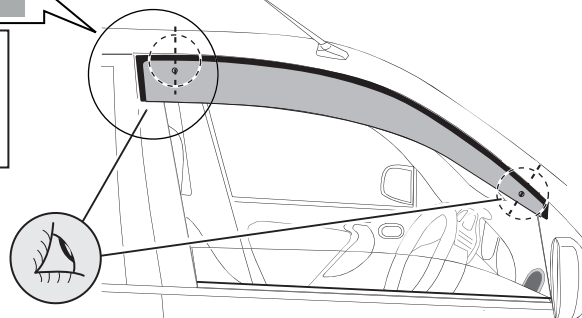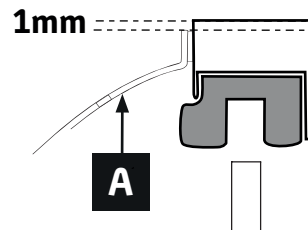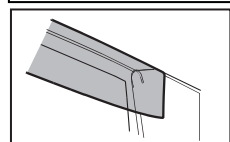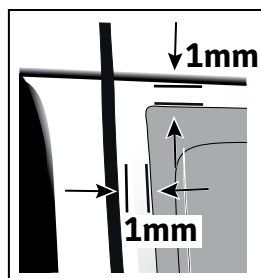


2

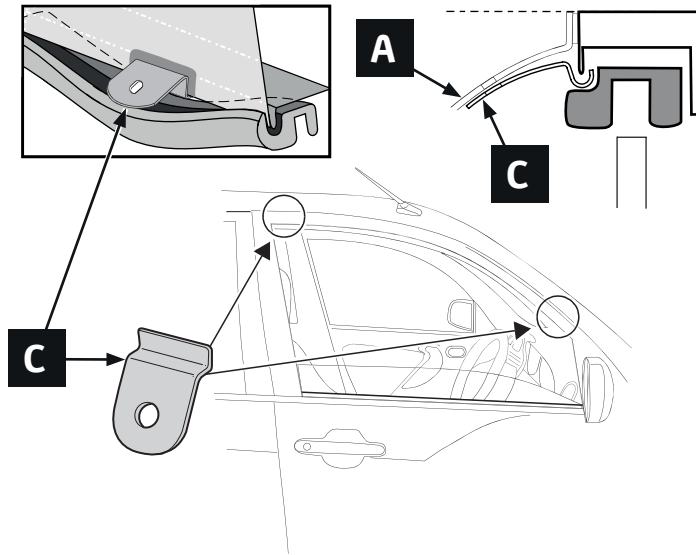


3

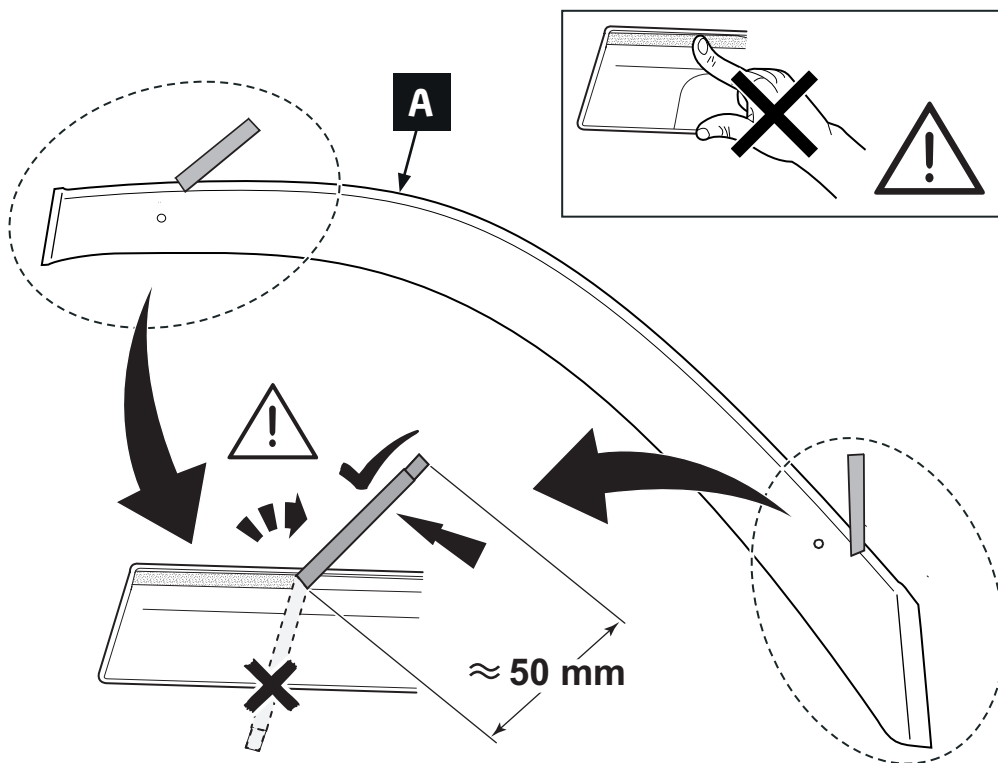


4

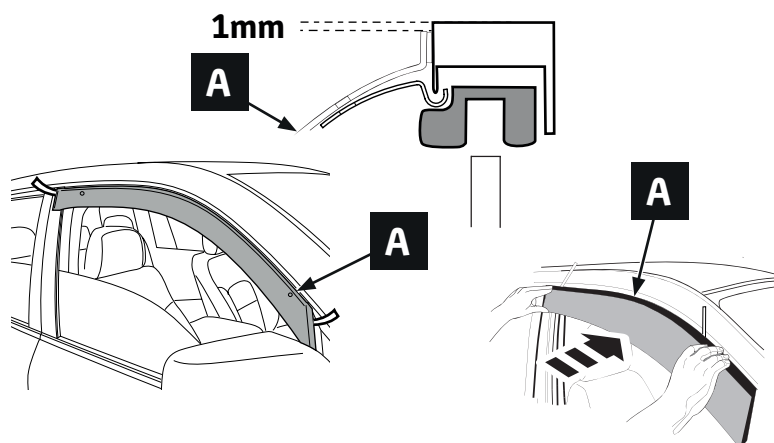

5

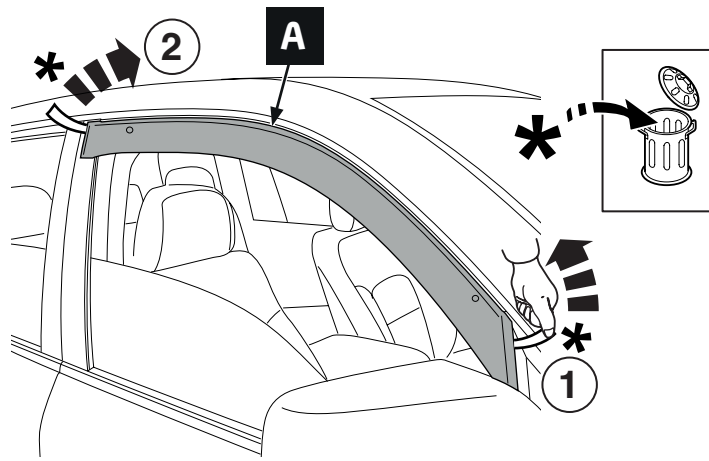


6

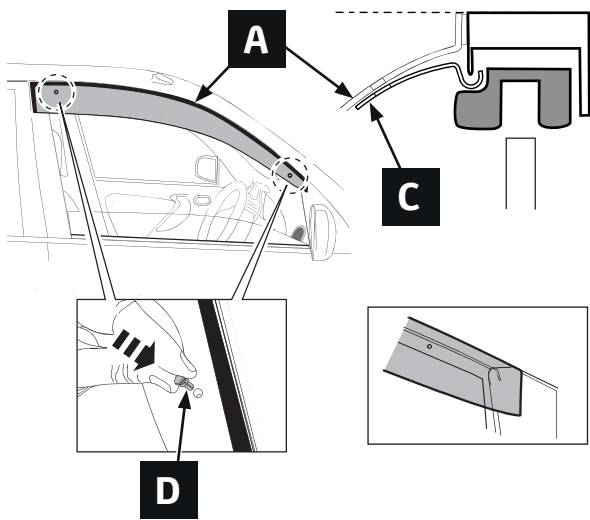


7



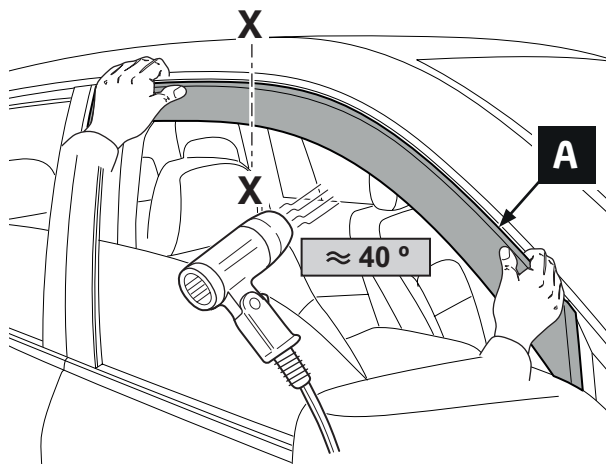



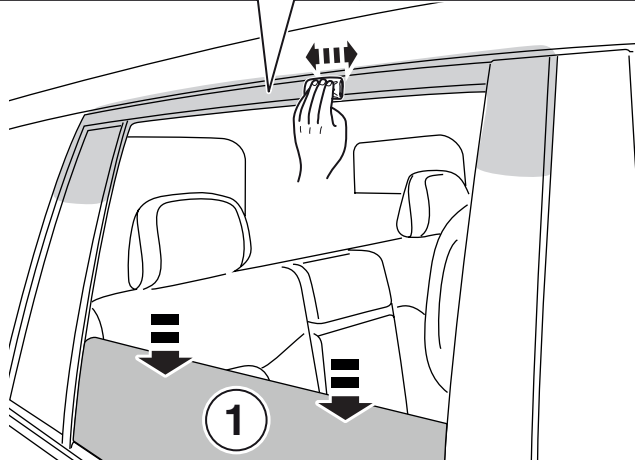
8

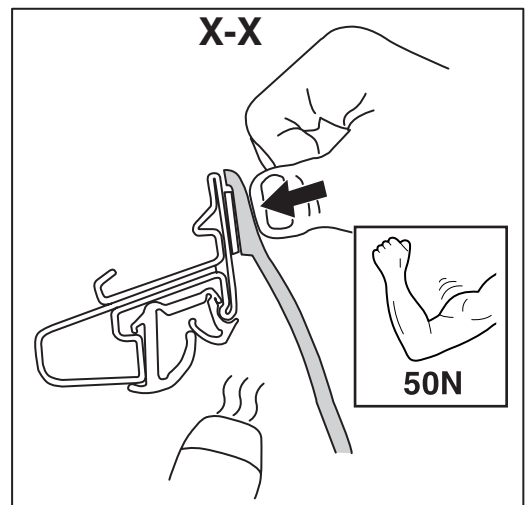


9




<p>2</p>  <p>3M VHB SURFACE CLEANER</p>	<p>3</p>  <p>DRY</p>	<p>4</p>  <p>(4x) PZ415-00000-00 3M Adhesion Promoter UV 4298</p>	 <p>MIN 90 sec. MAX 60 min.</p>
--	---	--	--







10

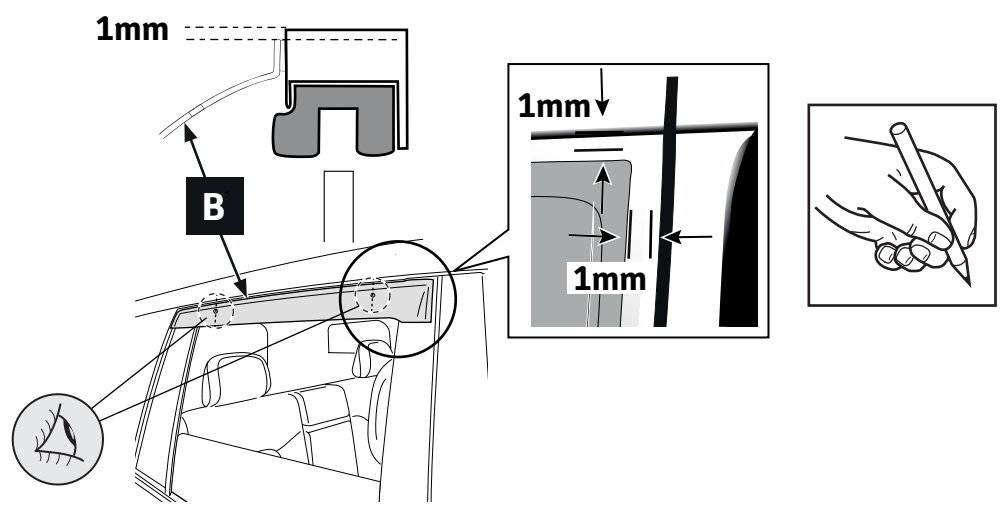


11


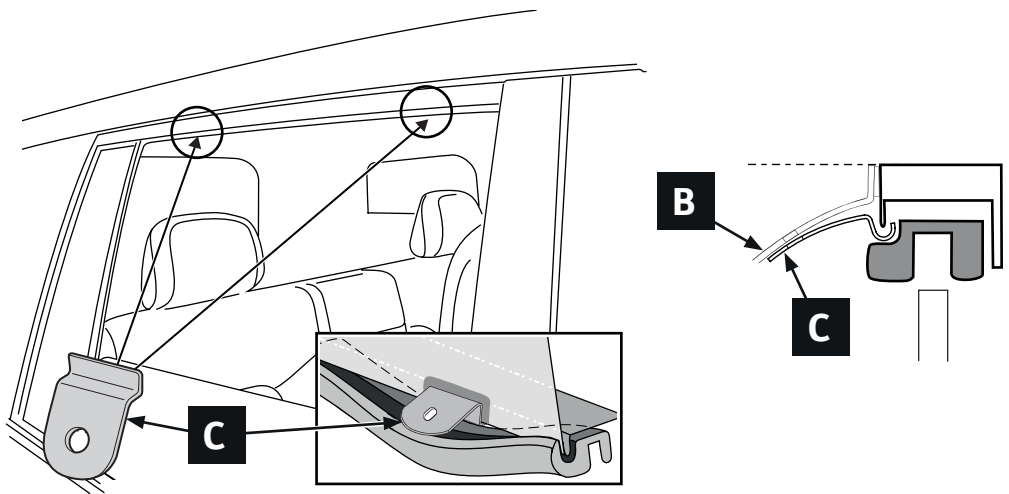


12

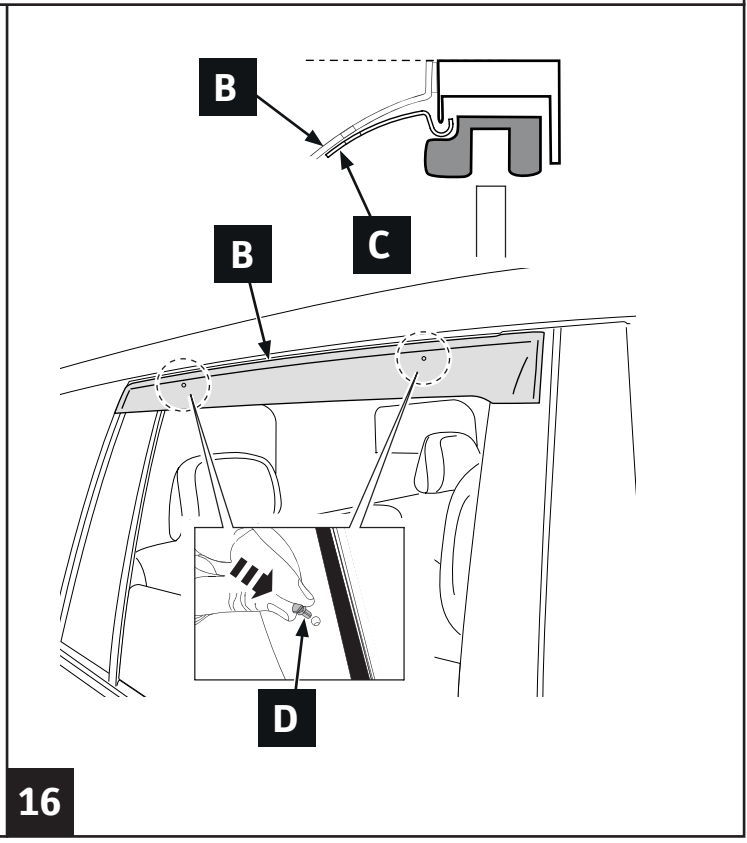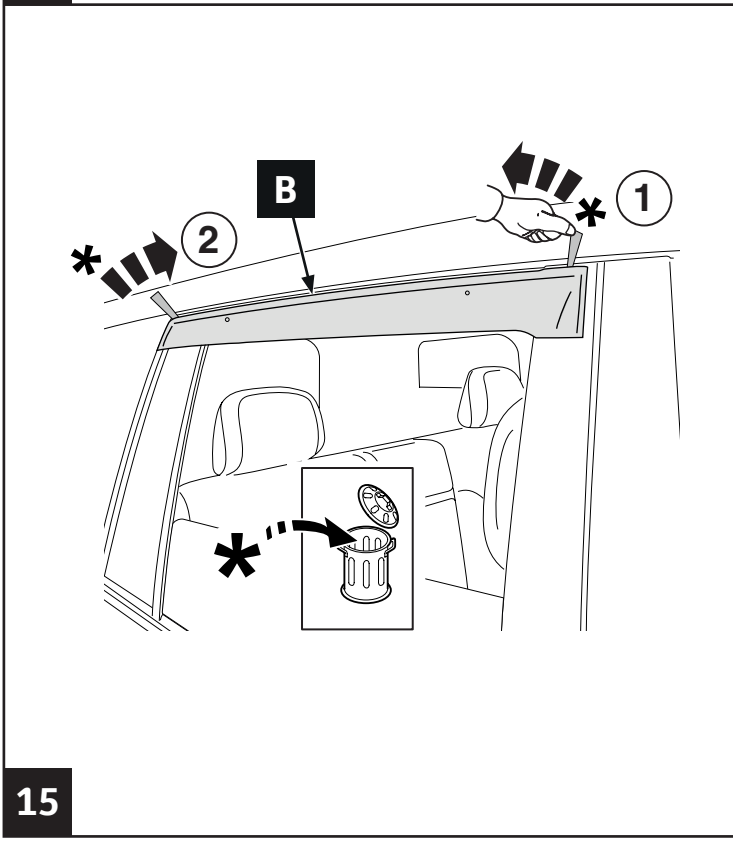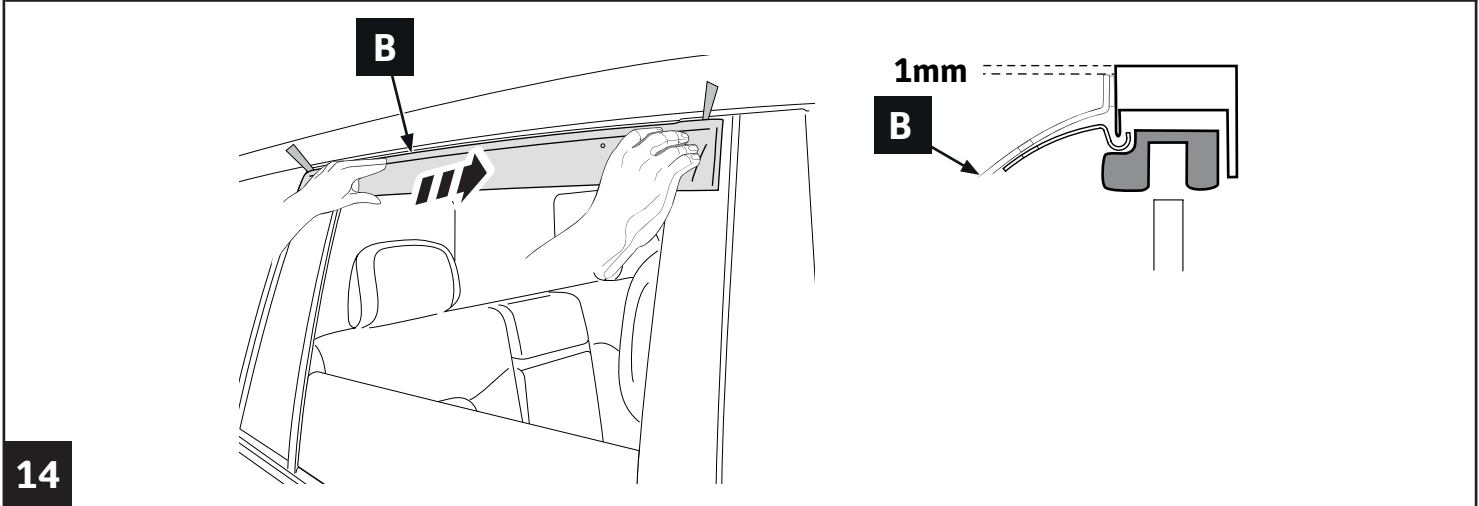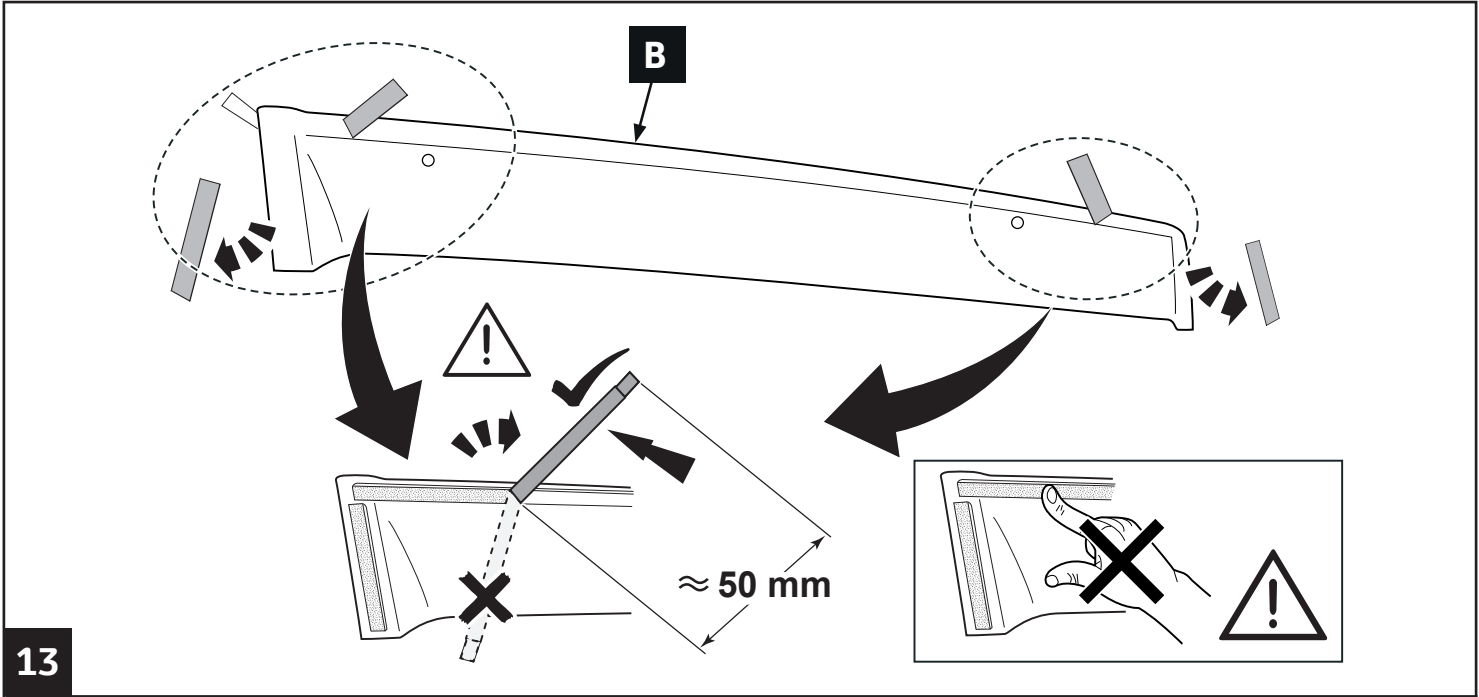

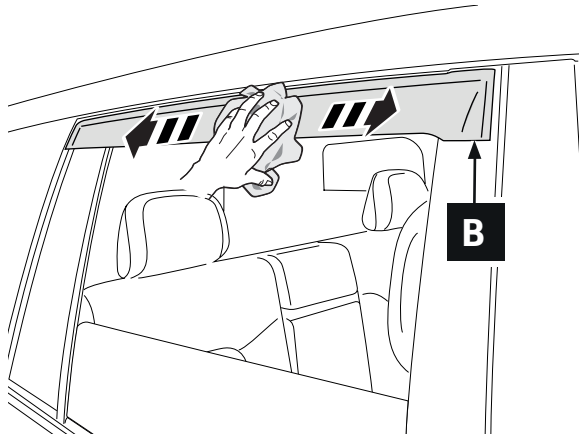

17

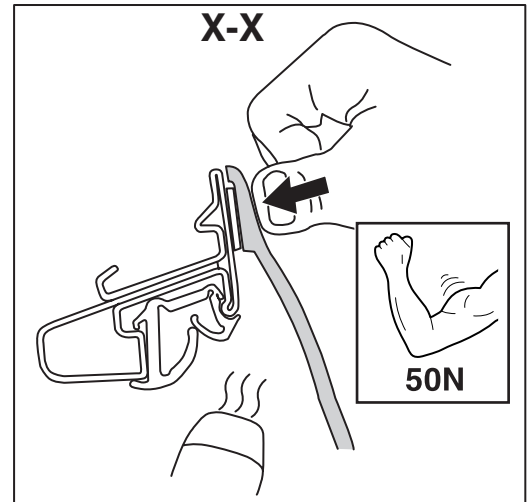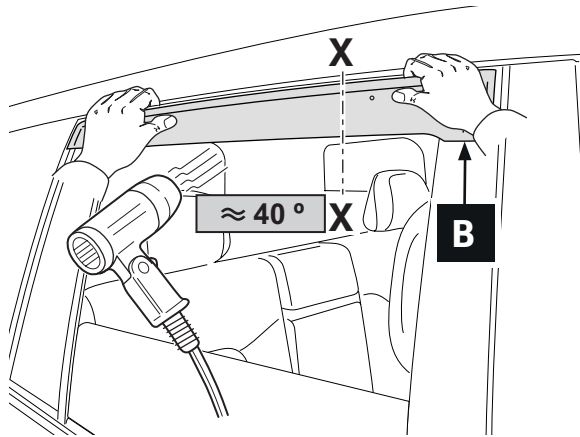

18

CHECK SHEET







TOYOTA

Model / Year Avensis Wagon **Wind deflectors**
2008/11, 2011/11, 2015/05

VIN n°

ALWAYS A
BETTER WAY

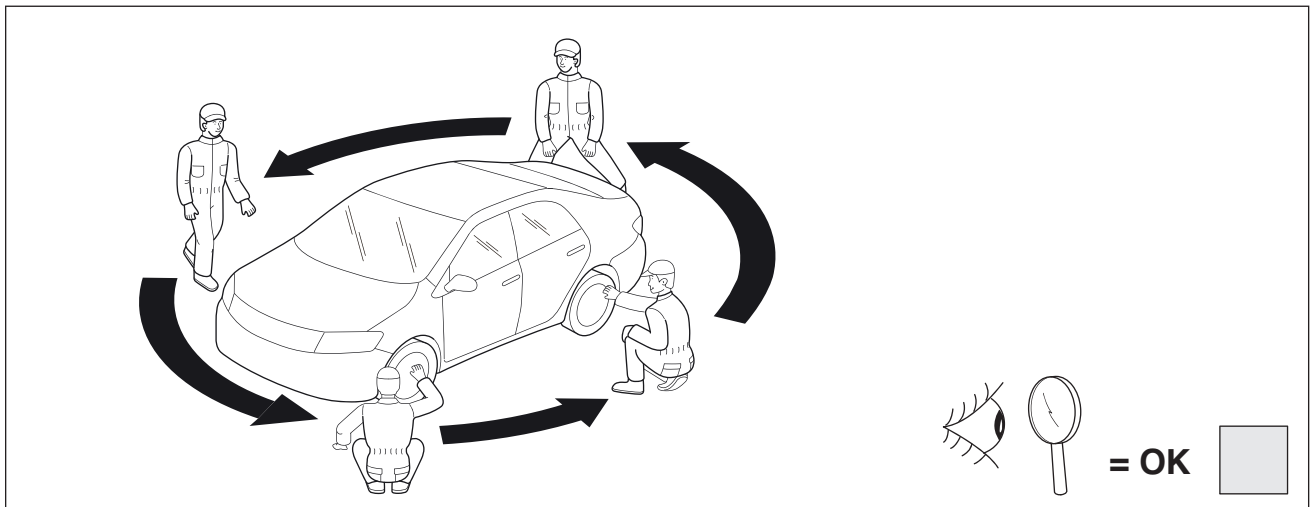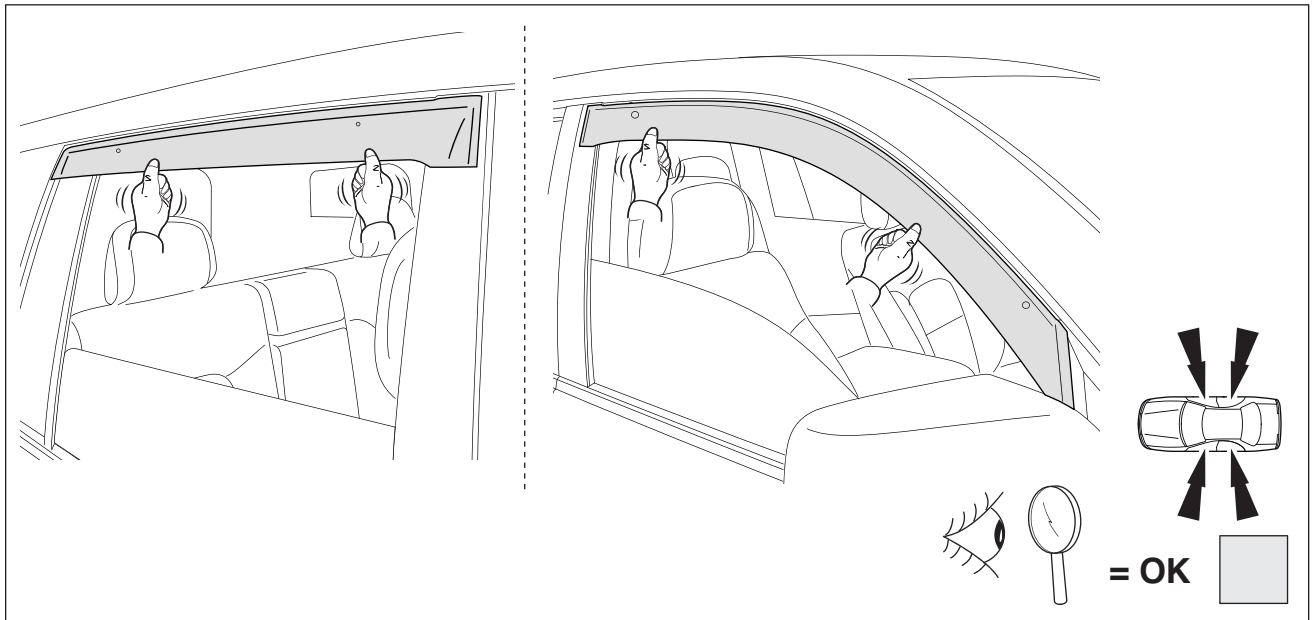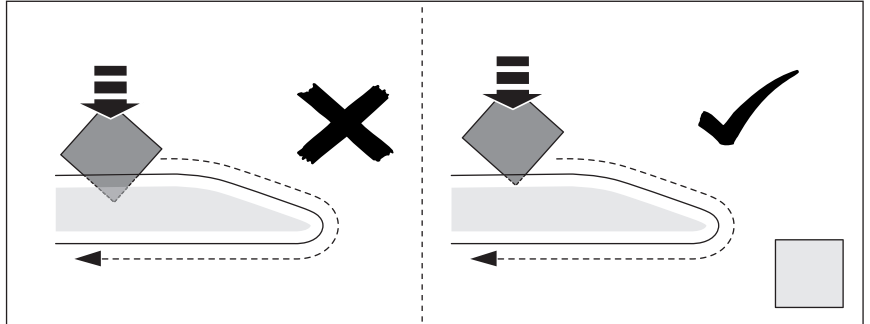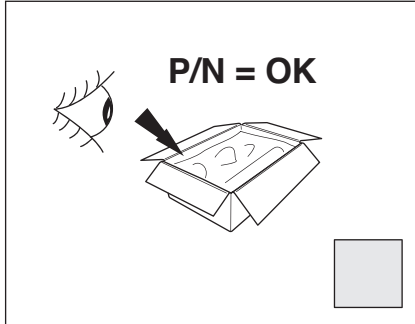

Installation Date:
... / ... /

Technician Name & Signature:

Stamp: