



Pennsylvania

REAR SPOILER Korea

Pumbeon P8340-0X000

Component and quantity:

- 1 x spoiler
- 4 x steel nut
- 1 x wiring
- 1 x rubber cover
- 2 x marking jig (inside (outside))




※ Caution ※

1. Read installation description before installation and threads to installation description
2. Clean certainly the section before installation to washer etc..
3. Be carefull so that other substance may not reach in the pad after remove paper on the pad

Trunk punching

1. Open tail gate and Remove the screw in H.M.S. LAMP's right and left in top portion center exclusion

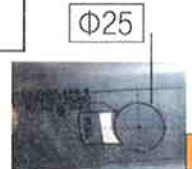

2. Set-up exactly marking jig on tail gate inside
In marking jig clarify position using center punching
Denote center point,



3. Make a drill by DeurilΦ25 in left, right point

4. Set-up exactly marking jig on tail gate outside
In marking jig clarify position using center punching
Mark center point,



5. Make three holes] by drill φ20 in center point indication point
Center 3 places



6. Drilling φ10 drill to SIDE LH,RH

※Attention : When work tail gate central part HOLE drill,
attention so that do not come deeply
[Reinforcement Bracket may be Broken]

Spoiler installation

7. After put spoiler according to the picture in the tail gate outside top point, Insert lamp wire to inside.



8. Band together lamp wire in another wiring with picture
the other side connects H.M.S. LAMP wire.

9. Assemble Spoiler and steel nut,
then Put rubber cap on the central HOLE



10. Installation End